

Card Reader Security for Internet Banking

Instructions for use



On/Off Button

Switches the Card Reader on or off.



Identify Button

Used when signing on to the Internet Bank with your Card Reader .

You will be prompted by the Internet Bank to press this after you have inserted your card into the Card Reader.



Respond Button

Used when viewing a PDF of your statement, changing your memorable data or passnumber, or setting up or changing a single arrangement to a third party. You will then be prompted by the Internet Bank to press this button after you have inserted your card into the Card Reader.



Sign Button

Used when making third party payments or setting up or changing regular arrangements to third parties.

You will be prompted by the Internet Bank to press this button after you have inserted your card into the Card Reader.



Menu Button

Adjusts the screen contrast.



C Button

Deletes all the numbers displayed on the Card Reader if you make a mistake.



CL Button

Deletes the last number displayed on the Card Reader if you make a mistake.



OK Button

You will be prompted by the Internet Bank to press this button after you have entered information requested into the Card Reader.



Numeric Buttons

For entering numbers.